

Live for freedom

ELECTRONIC TOILET

Seewin Technology (Zhejiang) Co.,Ltd.

Area A, Building 2, No. 1469, Jingsi Road,
Taizhouwan New Zone, Taizhou,
Zhejiang, 318000, China
www.china-seewin.com

Installation Manual
Happy A

Thank you for your trust

Sincerely thanks for buying our product, please understand important matters regarding the instructions for use from this manual before you use the product.

Please follow the instructions of the manual.

Please safekeep the manual after reading for review later.

Our products will be improved continually, we will not notice if there's some change.


The pictures in the manual are schematic diagram only, please refer to the actual product for details.

We hope that you can master the instructions for use through this manual.


To make sure the best function provided by the product and personal safety, please:

Read the manual carefully before the first time using.

Some function will be different according to the model, the specific kind prevail

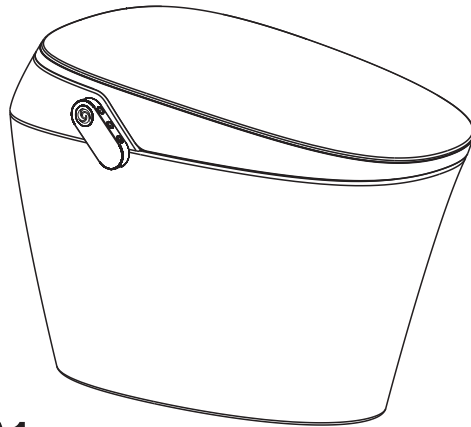

Anna A1

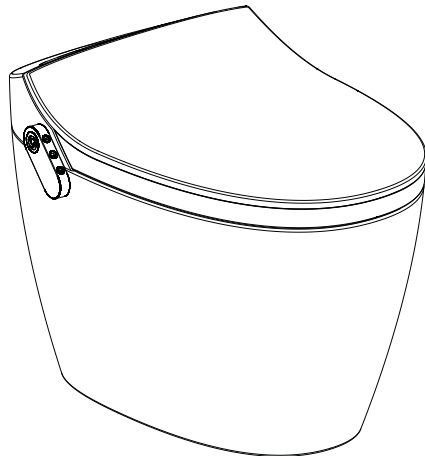

Alice A2

The name and content of harmful substance in product .

According to China 《Management approach for Restricting the Use of Harmful Substances in Electrical Products》 , please check below the harmful substances of electronic products.

Part name	Harmful substance					
	Lead(Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chrome(CrVI)	Polybrominated biphenyls(PBB)	Polybrominated Diphenyl Ethers) (PBDE)
Control device	×	○	○	○	○	○
Wire rod and connector	○	○	○	○	○	○
Shell component	×	○	○	○	○	○
Heating device	×	○	○	○	○	○
Drying device	×	○	○	○	○	○
Washing device	×	○	○	○	○	○
Waterway component	×	○	○	○	○	○
Label	○	○	○	○	○	○

This form is based on SJ/T 11364 standard.

○: stands for the content of harmful substance in all the homogeneous material of the part is less than GB/T 26572 standard.

×: stands for the content of harmful substance in at least one of the homogeneous material is more than GB/T 26572 standard.

For" ×" part , there are no replaceable technologies or components now, butthey are compliance with the requirements of the 《Management approach for Restricting the Use of Harmful Substances in Electrical Products》

Under the current technology, the content of harmful substances we control it to the lowest level. We will use less harmful substances by improving technology continuously.

This product's "environmental use period" is ten years, as the right picture shows. The replaceable parts may be not same as the product for "environmental use period". The environmental use period is effective only under the condition of using this product correctly in accordance with the manual.



Drying/Wind temperature

Fault	Failure analysis	Solutions
Drying with cold wind	Check wind temperature setting which is closed or in low gear	Adjust the wind temperature according to manual

Seat temperature

Fault	Failure analysis	Solutions
No seat heating/lower temperature	Check seat temperature setting which is closed or in low gear	Adjust the seat temperature according to manual

Remote

Fault	Failure analysis	Solutions
Remote failure	Low power of battery	Replace the old battery
	Check if there's any water inside remote or not	Dry the water with dry cotton cloth

Ceramics

Fault	Failure analysis	Solutions
Flush uncleaned when in lower water pressure	Angle valve filter blocked	Clean the filter according to the manual
	Water pressure is too low	Measuring the water volume which is less than 10L for 30s or not (Our suggestion is to buy a booster pump)
	Water inlet pipe bended	Ensure the water supply line is smooth
Normal water pressure but flush uncleaned and no siphon	outlet has air leakage	Please ask professional repair man for help
	S pipe blocked	Using a toilet dredge
Normal water pressure, but flushing not work	Check the angle valve is closed or not	Open the angle valve again
	Flush valve failure	Please ask professional repair man for help

Others


Fault	Failure analysis	Solutions
Cover/seat falls down too fast	Failure of Damping Slowing down Function	Clean the filter according to the manual
Orderly cyclic work of each function	Mistaken into engineering debugging mode	Pull out the plug and connect the plug after 1 minute
Night light not work	Check the night light which is close or not	Open the night light according to the manual
Leakage		Close the angle valve and disconnect the power supply then contact your installer

Catalog

- 1. Overview 1
 - 1.1 Toilet 1
 - 1.2 Remote 2
- 2. Packing list 3
- 3. Explanation of symbols 4
- 4. Safety instructions 4
 - 4.1 Normal use 4
 - 4.2 Safety instructions 4
 - 4.3 The use of battery 6
- 5. Side button 7
- 6. Common function operation 8
 - Flush function 8
 - Temperature adjust 9
 - SPA 10
- 7. Installation 11
 - 7.1 Precautions before installation 11
 - 7.2 Confirmation before installation 11
 - 7.3 Installation method 12
 - 7.4 Acceptance instruction after installing 14
- 8. Cleaning & maintenance 14
- 9. Product specification 16
- 10. Function list 18
- 11. Common fault diagnosis 20
- 12. The name and content of harmful substance in product 21

1. Overview

1.1 Toilet

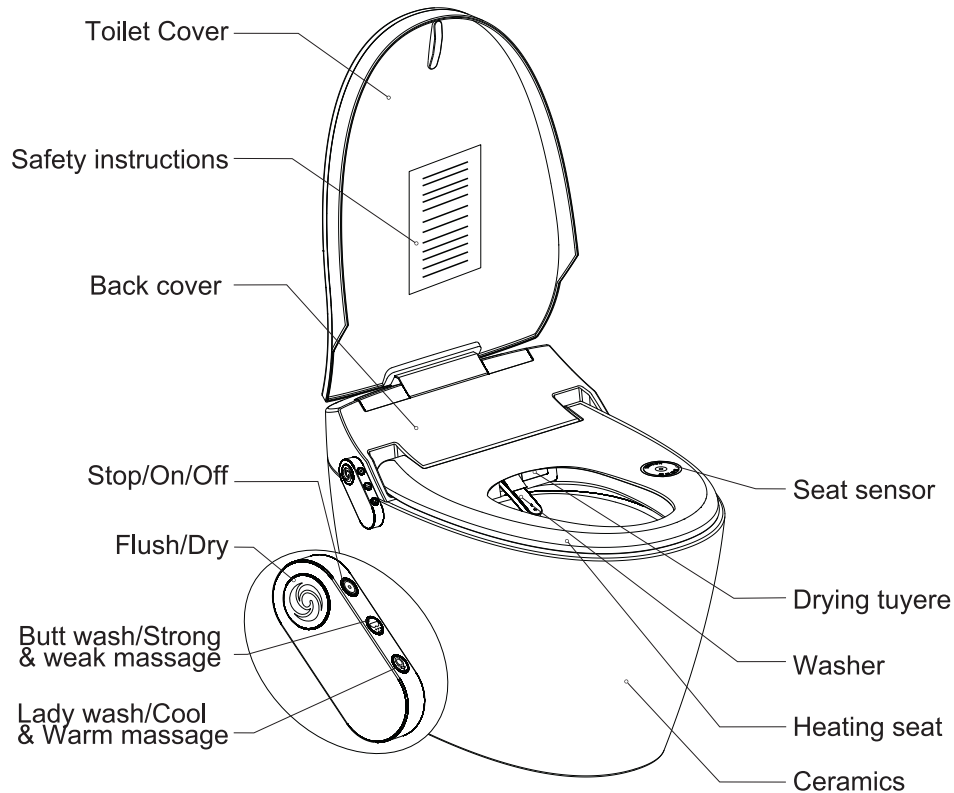

Note: Regarding the appearance & function, please refer to the physical goods.

11. Common Fault Diagnosis

If something goes wrong, please read the following to try to solve the problem. If can't solve, please contact to seller.

Power switch

Fault	Failure analysis	Solutions
Product not work	Check whether the socket is electrified or not, the plug is loosened or not	Check circuit
	Check whether the toilet is power on or not (The side button light is on or not)	Press the power on/off button till the side button light is on
	Check whether the leakage protection button in the plug is on or off (The light of leakage protection plug is on or off)	Pull out the plug and connect it later. Press the reset switch of the leakage protection plug. If still not work, pull out the plug and ask a professional repair man for help


Butt wash , Lady wash

Fault	Failure analysis	Solutions
No water from the nozzle	Check if there's no water supply	Wait for water supply back to normal
	Check if the angle valve is closed or not	Open the angle valve
	Check if the inlet water filter is blocked or not	clean the water filter
	check if the water inlet pipe is bended or not	Ensure that the inlet pipe is not bended
Cleaning strength not enough	check the water pressure is in low gear or not	turn up water by remote
	Check inlet filter blocked or not	clean the inlet filter
nozzle water abnormal	Abnormal operation	Unplug the power cord and plug it in 1 mins later
Water temperature not enough	check the water temperature is in low gear or not	Reference manual how to adjust water temperature
Washer always dripping water	Solenoid valve failure	please find a professional repair man
Washer can not use	seat body induction failure	please find a professional repair man

10. Function list

Product name		Anna	Alice	
Model		A1	A2	
Category	Function	Configuration		
Wash	Clean	Butt wash	•	•
		Women wash	•	•
	Way of wash	One-button SPA	•	•
		Intelligent wash	•	•
		Reciprocating wash	•	•
		Cool/Warm massage	•	•
		Strong/Weak massage	•	•
		Water pressure adjust	•	•
		Water temperature adjust	•	•
		Tube position adjust	•	•
	Nozzle nursing	Nozzle self-cleaning	•	•
		Nozzle pipe cleaning	•	•
Comfortable	Temperature	Seat heating	•	•
		Warm air drying	•	•
	Slowing down	Damping slowing down	•	•
	Temperature adjust	Seat temperature adjust	•	•
		Air temperature adjust	•	•
Convenient	Convenient	Night light	•	•
		Frequency conversion heat	•	•
		Intelligent power saving	•	•
	Intelligent Flush	Electricity-off flush	•	•
		Remote flush	•	•
		Button flush	•	•
		Automatic flush	•	•
		Drying flush	•	•
	Sensor	Side button	•	•
	Safety and environmental protection	Environmental protection	Seat sensor	•
Water quality purification			•	•
Intelligent deodorization			•	•
Countercurrent prevent			•	•
Safety		Business mode	•	•
		Eight level protection	•	•
	Silver ion antibacterial	•	•	

1.2 Remote

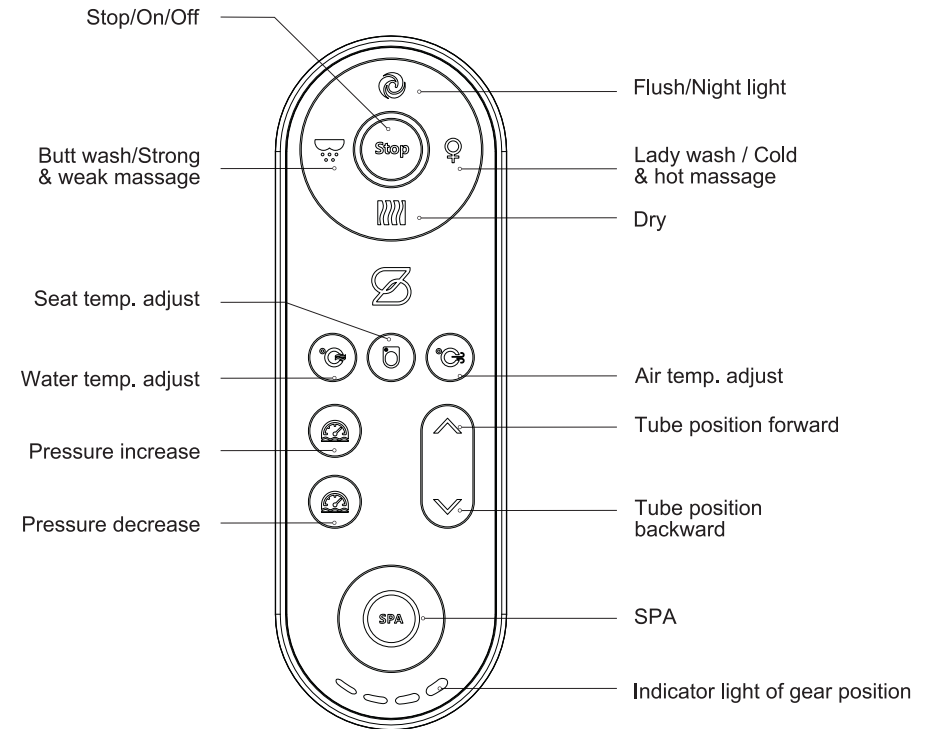


Remote Instruction of pair code


1. Take out the battery of remote, unplug the toilet and wait for about 20 seconds.
2. Install the battery of remote (Don't touch the button during the process).
3. Make the plug connected, within 8 seconds, long press the one-button SPA button for 3 seconds, the remote light flashes two times, then the pair code finishes.

Tips: Do not keep it close to your body for whom has cardiac pacemaker and other auxiliary medical equipment in the body. Because the remote has Strong magnet inside.

2. Packing list

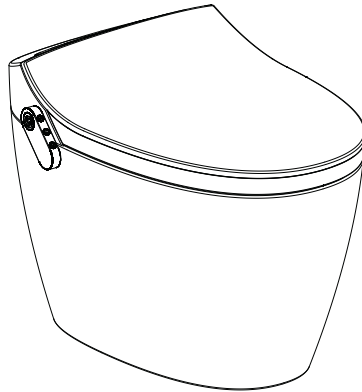


Complete machine

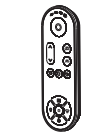

Remote



 
Certificate



Sludge seal ring



Warranty card

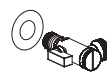

Angle valve filter & decorative cover



Manual



Battery box



Battery of remote

Adjust step:

- The first step: the pulse valve 1's flushing time adjust, at this time green light flashes (0.5s dark 0.5s bright). Use the remote control [gear position +] and the [Gear position -] to adjust the time, add or minus 0.5s one time. The adjustment range is 4-10 seconds; Then press the side button for lady wash or lady wash knob entering into the second step: pulse valve 2's sewage time adjust. At this time, yellow light flashes. The adjustment method is the same as first step.
- Then Short press the side button for lady wash or lady wash knob to enter into the third step: pulse valve 1's water return time adjust. At this time, red light flashes. The adjustment method is the same as first step.
- Finally, press the side button for lady wash or lady wash knob to leave the pulse valve time adjust function.
- Exit: except for the side button for lady wash or lady wash knob, or the button for water pressure and tube position in the remote, all other button can exit the adjustment function.
- If the flush time adjustment has reached the limit, there will have a tone of operation failure when adjusting. The default flushing time is 5s, 6s, 5s, and the adjustment range is 4-10 seconds.


9.Product specification

Rated voltage	220-240V~,50Hz
Rated power	1500W
Power cable	1.5m
Applicable water pressure	0.14-0.75MPa
Water temperature	4-35°C
Ambient temperature	4-40°C
Net weight	45kg
Waterproof level	IPX4
Cleaning water flow	0.6-0.9L/min
Seat temperature adjust	(Normal temperature-around 40°C) total 4 gear
Water temperature adjust	(Normal temperature-around 40°C) total 4 gear
Wind temperature adjust	(Normal temperature-around 40-65°C) total 4 gear
Cleaning time	Normal cleaning is about 90s, SPA cleaning is about 5mins
Nozzle position adjust	4 gear
Heating mode	Fraquency conversion heat
Safety device	Leakage Protection switch, wind /seat/water temperature Protection
Deodorization	Nano intelligent deodorization

Executive standard: GB4706.1 GB4706.53

Note: Rated power: when the ambient temperature is 23 ° C, inlet water static pressure is 0.2 MPa ± 0.02 MPa, inlet water temperature is 12~13° C, and seat temperature (high), water temperature (high), water pressure (low),water flow (high) the maxium stable power we can read in the mode of butt wash.

It is recommended to clean the filter every 1-2 months.

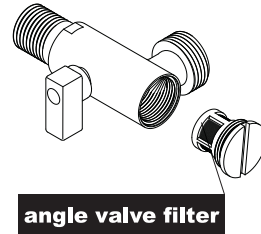

Tube and nozzle's maintenance

- Clean the tube and nozzle by hand: clean the tube and nozzle regularly or clean immediately if dirt filth found.

In the condition of nobody on the seat, press the side button [Butt wash] for 2 seconds, the washer will extend and some water will flow out from the surface of washer. Clean the tube and nozzle with a toothbrush coated with toothpaste. Do not use excessive force. After cleaning, press the side button [Stop], the nozzle will take back.

Plastic parts and ceramics's cleaning and maintenance

- Clean the toilet pan regularly, or clean it immediately if dirt filth found. If not clean it oftenly, it may become stubborn dirt filth.
- Please clean the lid, seat and back cover by non-corrosive detergent and warm water, then wipe it with a damp cloth gently. Make sure that no detergent left in the seat. The ceramics can be cleaned with neutral detergent combined with cold or warm water, using a soft brush, rag or sponge (Corrosive detergent is forbidden to use).

Antifreezing in winter

- When you go out for a business trip or traveling and not use the toilet for a long time, please close the water supply angle valve, then press the flush button in the remote to conduct a drainage. After 30 seconds of drainage, please be sure to pull out the power plug.
- Unfreeze method of product: put the product for 30 minutes in the warm room to let it unfreeze naturally (can not use hot water or hair dryer).

Flush time adjust

- When leaving the seat, press the side button [Flush/dry] for 8 seconds to the flush time adjustment function to adjust the pulse valve time.

3. Explanation of symbols

- | | | | |
|-----|---|---------|---|
| 3.1 | ⚠ | DANGER | Express that you will be dead or seriously injured if not avoid the dangerous situation. |
| 3.2 | ⚠ | WARNING | Express that you will be dead or seriously injured if not avoid the dangerous situation. |
| 3.3 | ⚠ | CAUTION | Express that it may cause personal injury or property damage if you ignore the sign and misoperate. |
| 3.4 | ⊗ | | Do not add foreign matter such as water or detergent to the product body. |
| 3.5 | ✘ | | Do not disassemble the product privately. |
| 3.6 | 🔥 | | Keep away from fire. |
| 3.7 | ! | | Please operate according to the manual. |
| 3.8 | ⊘ | | It's forbidden. |

4. Safety instructions

Please read the manual carefully, especially the safety instructions in order to make sure you can enjoy the service of the product. Please reserve the manual carefully. Please attach the manual if you send the product to others.

4.1 Normal use

This product is a one-piece intelligent toilet with integrated flushing system. It can comfortably clean the buttocks and private place which is used only for closed space. Any other use is considered as abnormal use. For abnormal use, we will not assume any responsibility.

4.2 Safety instructions

Please read and follow the safety instructions as below!

Requirement of user

- For disabled, defective people in physical, sensory perception and intellectual abilities, and people who is lack of experience and common sense (including children), please use this product under supervision.
- Don't allow children to play with this product.



DANGER

- Please make sure that the ground wire has been connected.
- If the the ground wire is not connected, it may cause electric shock or leakage.
- Make sure the power cord is not damaged.
- The power cord can't be stucked or squeezed.
- Keeps the power cord away from hot surfaces and sharp edges.
- The power socket must be within the specified range(AC220-240V±10%).

! DANGER

- Do not use it in thunder weather. (Please Pull out the power plug in thunder weather.)
- Do not pull the power cord at random, break, forcibly bend and twist, stretch, curl, bundle, load or over-clamp.
- Do not touch or plug and unplug the power plug with wet hands, otherwise there will have danger of electric shock.
- Do not use it when it can't work normally. Disconnect power immediately , close the angle valve to cut off the water source and ask for help from professional repair man.

! WARNING

Avoid product failure and damage caused by improper use.

The cold water of the intelligent electronic toilet should be connected from the main water supply pipe. Do not connect any wastewater, mixed water, industrial water, sea water or other untreated or semi-treated water.

- If the product is moved from a lower temperature position to a higher temperature place, it may have condensate water. Please turn off the product for several hours at this time.
- Do not install this product in a room where may be frosted. The room temperature can't be less than 4 °C.
- Do not put fire, candles, cigarette butts or similar items on this product.
- Do not soak the product in water or expose it to the sun.
- Do not attempt to flush debris other than human waste and toilet paper.
- Do not lean on the back cover, climb or stand on the product.
- Do not put any heavy objects on the cover.
- Repair work must be performed by relevant professionals.
- Do not disassemble the back cover, cover and seat.
- Do not modify, retrofit or repair the product.
- Incorrect repair may cause accidents, damage or operational failure.
- If the power cord is damaged, don't disassemble it by yourself. It must be replaced by the manufacturer or the repair department or a similar professionals.
- When do the cleaning and maintenance of the plastic part, please do not use unsuitable detergent(such as Sulfuric acid, nitric acid, acetic acid, carbon cyanide, chloroform, acetone, methyl ethyl ketone, benzene, hydrochloric acid, nitric acid, steam kerosene etc.)
- Please cut off the power when cleaning the product and the remote. Don't pour water or detergent into the product.
- Avoid to use this product in an environment which is humid and easily touched by water .Don't spray water to the product. Don't rinse this product with water.
- Don't block the air outlet. Don't put your hands or other things into the air outlet. Don't cover the air outlet when using it.
- Don't shoot urine into the air outlet.
- Do not put ignited cigarettes and other burning materials into this product.

7.4 Acceptance instructions after installing

After installation finished, you must test run and record the installation results in the table below.

Acceptance inspection item		Conclusion	
Make sure whether it is connected to the AC220-240V, 10A, 50HZ grounded power supply socket.			
Is the power plug connected stably in the socket ?			
Are the water pipe joints tightened?			
Is the total inlet valve of the water pipe open?			
Is the power indicator light lighted up?			
Can the cleaning nozzle extend and retract? Leakage or not?			
All the function are normal or not : Seating function, butt wash, lady wash (including water pressure adjust, cleaning position adjust), drying (including wind temperature adjust), water temperature adjust, seat temperature adjust, nozzle cleaning, deodorization, remote control and side buttons are used normally or not? The inspection must be completed and confirmed.			
Installation date		Store name	Installer

8.Cleaning and maintenance

please clean and maintain the product regularly to make sure the normal use of product.

Note

- Please cut off the power, close the water supply angle valve and stop the water supply before maintenance.
- Do not rinse this product with water during maintenance.

Maintenance of the filter

- For your health, please clean the filter (or replace the filter) according to the local water quality.
- When the cleaning strength becomes weaker, please clean the filter (or replace the filter) in time.
- ※ Please close the water supply angle valve when disassembling the filter.
- ※ When installing the filter, tighten it to avoid water leakage.
- ※ Turn the filter counterclockwise with a coin to open the filter.

Connect to water supply pipe

1. Close the water supply.
2. Install the angle valve filter and the decorative cover of the angle valve to the proper position, then open the angle valve switch to drain for 1 minute (using a container to do the water receiving). Drain the dirty water inside the pipe.
3. Connect the angle valve filter, water supply hose in sequence as Figure 3.
4. Tighten the connect part of the pipe and check carefully to make sure no leakage.
5. It is suggested to clean the filter every 2 months as Figure 4. Close the angle valve before cleaning and rive the filter by coin, then install and tighten the filter back after remove the dirt and impurity.

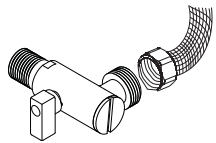


Figure 3


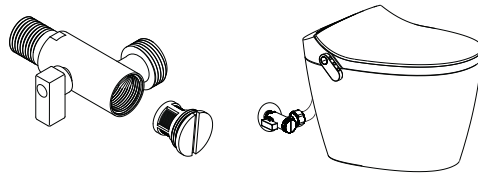


Figure 4

Smear the glass glue

Smear the glass glue in the gap between the bottom of the ceramics and the ground after the toilet is installed to prevent water seepage.

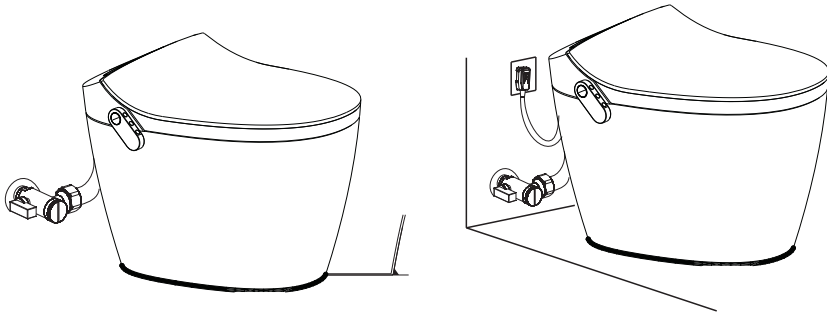

Connect the power cord plug

Open the angle valve filter and connect the power plug. The power cord plug must be connected to wall socket with safety grounding device in AC220-240V, 10A, 50HZ.

4.3 The use of battery

If there's leakage of battery liquid, please do not let the skin, eyes and mucosa to be touched by the battery liquid. If you touch the liquid carelessly, please rinse the infected part immediately with mass water and go for a doctor immediately.



WARNING


- Please put the battery out of the reach of kids. It will be life-threatening if swallowing the battery. Please request medical immediately if the battery has been swallowed.
- Do not charge the battery. It is forbidden to reactivate and disassemble the battery or put it into fire.
- Please get out the battery from the remote after running out of power .Otherwise the liquid may leak and cause damage.
- Clean the battery and contacts before assemble the battery. Pay attention to the battery polarity to be assembled in correct position during installation.
- Please take out the battery and save it correctly if the remote is not used.
- Do not keep the battery in extreme environment. Do not touch the heat source or expose to the sun, otherwise it may cause leakage.
- Do not carry and store the battery with metal products.



CAUTION

- Do not use excessive force when closing the cover and seat .
- Do not intentionally soil, spray or block the cleaning nozzle.
- Please pull out the plug regularly and wipe the dust from the power plug with a dry cotton cloth.
- Keep the skin close to the seat sensor when use it, otherwise the product will stop cleaning or drying function. Children should seat back to touch the seat sensor.
- Please use the new hose parts attached with the product, the old one can't be reused.
- Please avoid closing to the heater.
- Do not connect to the power through the external switch to avoid danger from accidental resetting of the circuit breaker, such as a timer or a timed on/off circuit that is connected by a common component.
- Please close the water supply angle valve before disassembling the filter. Be sure to tighten the angle valve to prevent water leakage when installing the filter after cleaning.
- When you will not use this product for a long time, such as going out for a business trip or travelling, be sure to pull out the power plug, turn off the water and drain the remaining water inside the product.
- The remaining water may freeze when the product is transported over long distances or stored for a long time in cold winter or alpine region. To prevent the damage caused by freezing, please take antifreeze measures.

5. Side button

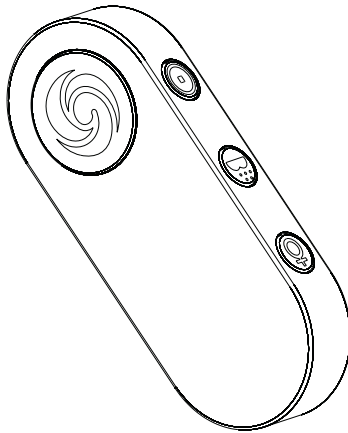

In the side buttons, the Flush/Dry button will be recognized as flush function when body is leaving the seat and dry function when body is seating.

Instruction of power reconnecting of toilet after power cut

The water temperature, seat temperature, air temperature, tube position, water pressure gear position will be reset to medium gear position when the power is reconnecting after power cut. (When you use the remote to control, the remote memory of water temperature, seat temperature, air temperature's gear position will be saved to the toilet.)


Instruction of warning tone

1. The correct warning tone is one beep and the wrong warning tone is two beeps.
2. The gear position warning tone has four tones from low to high related to OFF, LOW, MID, HIGH gear position when adjusting the gear position.

Instruction of pre-flush (Wall moisturizing)

2 seconds after seated, the toilet will flush for 1 second on the inner surface of ceramics in the mode of standby to reduce the remaining dirt after using.

Installation drawings:(mm)

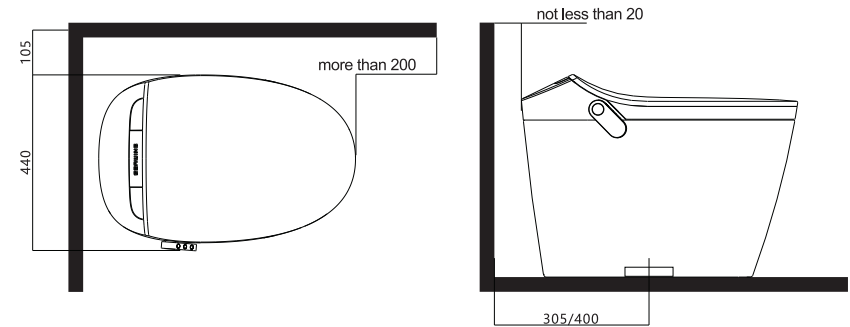

7.3 Installation method

Installing of sludge and ceramics

1. Put the sludge on the sewage outlet and seal it as Figure 1.
2. Connect the ceramics's sewage outlet to the sewage outlet and press the sludge as Figure 2.

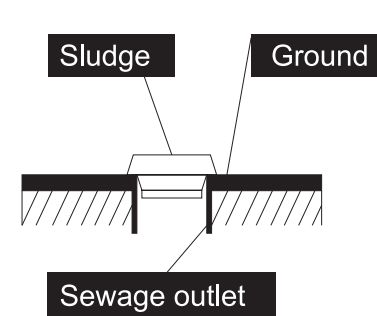


Figure 1

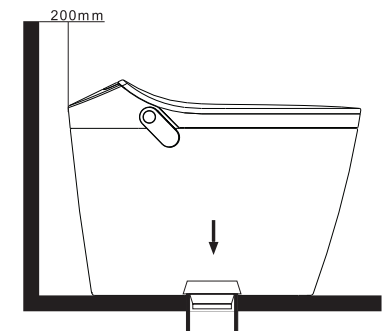


Figure 2

7. Installation

7.1 Precautions before installation


Installation space:

please make sure opening and closing the door will not affect the installation and use when you are checking the installation space is big enough or not. The distance of the inlet pipe from the ground should be more than 150mm.

Please confirm the location of sewage outlet and wax seal as below picture before installation.

7.2 Confirmation before installation

Space structure of bathroom

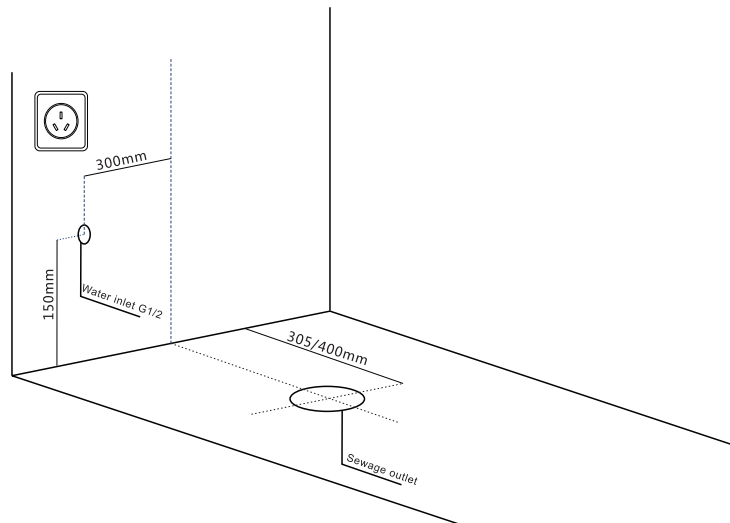

Water pressure

1. Minimum static water pressure : 0.14MPa (1.4kg/cm²).
2. Minimum water flow: more than 20L per minute.
3. Please make sure to meet the two conditions above when the toilet is used parallelly with faucet or other water equipment.

6. Operation of common function

Flush function

- Short press the [Flush/Night light] button to start flushing.
 - It will flush automatically in advance when start the dry function.
 - It will start flush function automatically after the human body is leaving seat over 5 seconds who is seating over 6 seconds before. (It will not flush automatically if it is dry function at the time of leaving seat)
 - Long press the [Flush/Night light] button to start/close the night light function.

Butt wash

- When the human body is seated, short press the [Butt wash/Strong & weak massage] button to start the butt wash.

The pipe reciprocating function opens by default, which will increase the cleaning area. Press the [Butt wash/Strong & weak massage] button again to close the pipe reciprocating function.
- Short press the [Stop/On/Off] button to stop the butt wash.

It will stop cleaning function and change to dry function automatically after continue cleaning for about 90 seconds.

Lady wash

- When the human body is seated, press the [Lady wash/Cool & warm massage] button to start the lady wash.

The pipe reciprocating function opens by default, which will increase the cleaning area. Press the [Lady wash/Cool & warm massage] button again to close the pipe reciprocating function.
- Short press the [Stop/On/Off] button to stop the lady wash.

It will stop cleaning function and change to dry function automatically after continue cleaning for about 90 seconds.

Dry

- When the human body is seated, press the [Dry] button to start the dry function.
- Short press the [Stop/On/Off] button to stop the dry.



It will stop automatically after continue drying for about 5 minutes.

Water pressure adjust

- During the process of washing, press the [Pressure increase] button to increase the cleaning intensity.
- During the process of washing, press the [Pressure decrease] button to reduce the cleaning intensity.


The water pressure adjustment has four gear position, close, low, mid, high. If it is out of gear position, the machine responds with two beeps showing the operation is invalid.(The correct operation only have one beep.)

Tube position adjust


-  During the process of washing, press the [Tube position forward] button to move the tube position forward.
-  During the process of washing, press the [Tube position backward] button to move the tube position backward.

The tube position adjustment has four gear position, close, low, mid, high. If it is out of gear position, the machine responds with two beeps showing the operation is invalid.(The correct operation only have one beep.)


Temperature adjust

-  Press the [Water temperature] button to set the water temperature gear position, the remote will display the current gear position of water temperature (Number of light: 1-[Close]、 2-[Low]、 3-[Mid]、 4-[High]). When setting, the light of side button [Butt wash]、 [Lady wash] will display blue-[Close]、 green-[Low]、 yellow-[Mid]、 red-[High].



-  Press the [Seat temperature] button to set the seat temperature gear position, the remote will display the current gear position of seat temperature (Number of light: 1-[Close]、 2-[Low]、 3-[Mid]、 4-[High]). When setting, the light of side button [Stop] will display blue-[Close]、 green-[Low]、 yellow-[Mid]、 red-[High].





-  Press the [Air temperature] button to set the wind temperature gear position, the remote will display the current gear position of wind temperature (Number of light: 1-[Close]、 2-[Low]、 3-[Mid]、 4-[High]). When setting, the light of side button [Flush/Dry] will display blue-[Close]、 green-[Low]、 yellow-[Mid]、 red-[High].




Press again the corresponding temperature adjustment button to change the temperature gear position, the changing way is [Close] > [Low] > [Mid] > [High].



SPA

-  Press the [SPA] button to start SPA function when the human body is seated.
 - When the SPA function is open, it will start the memory cleaning function and gear position and also start the strong & weak massage and cool & warm massage function.
 - Press the [SPA] button once more to close the strong & weak massage and cool & warm massage function.
-  Short press the [Stop] button to stop the SPA function.
 - After continue cleaning for about 5 minutes, it will stop cleaning function and change to the drying function automatically.


Strong & weak massage

-  During the process of washing, long press the [Butt wash/Strong & weak massage] button to turn on/off the strong & weak function, the water pressure starts change of strong and weak.

The corresponding relationship between the gear position of strong & weak massage and water pressure.

Water pressure: close, low	Strong & weak massage: low
Water pressure: mid	Strong & weak massage: mid
Water pressure: high	Strong & weak massage: high


Cool & warm massage

-  During the process of washing, long press the [Lady wash/Cool & warm massage] button to turn on/off the cool & warm massage, the water temperature starts change of low and high.

The corresponding relationship between the gear position of cool & warm massage and water temperature.


Water temperature: close, low	Cool & warm massage: low
Water temperature: mid	Cool & warm massage: mid
Water temperature: high	Cool & warm massage: high

Night light

-  Long Press the [Flush/Night light] button to turn on/off the night light function.

Deodorization

The deodorization function starts after human body is seated. The deodorization function stops after human body leaves the seat for around 60 seconds.

-  When the human is seating and the function of cleaning or drying is not open, short press the [Stop/On/off] button to stop the deodorization function.